

TAKING APART PROFIM LIGHT UP 250SL

1. Hit the ring that is between the gas lift and the seat mechanism with a hammer.



2. Hit the gaslift with a hammer it will release the footbase.



TAKING APART PROFIM LIGHT UP 250SL

3. Pull the castors away from the footbase.



4. Remove the two screws holding the backrest.



TAKING APART PROFIM LIGHT UP 250SL

5. Using a screwdriver, lever the upholstery up, then remove the upholstery from the groove of the backrest all around.




6. Remove the three mounting screws from the right and left armrests.



TAKING APART PROFIM LIGHT UP 250SL


7. Locate the four screws holding the mechanism to the seat.

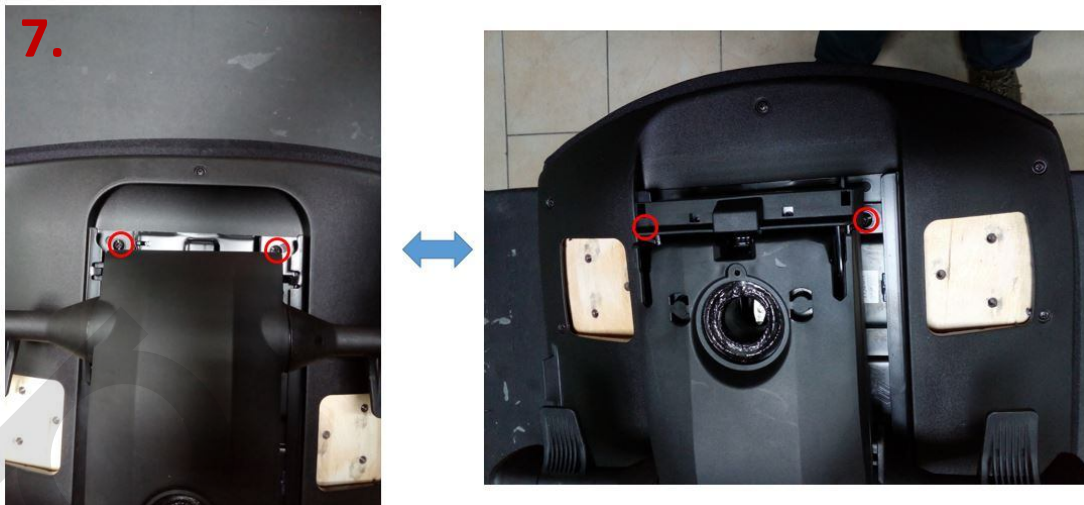

8. Remove the two screws holding the backrest.




9. Remove the eight screws that secure the cover.

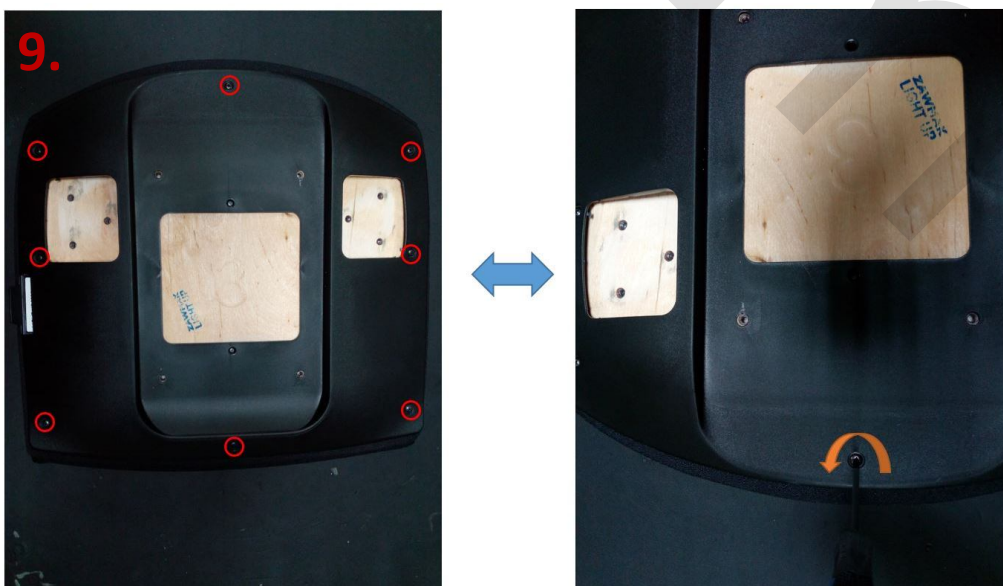

TAKING APART PROFIM LIGHT UP 250SL

10. Use a screwdriver to undo the upholstery.

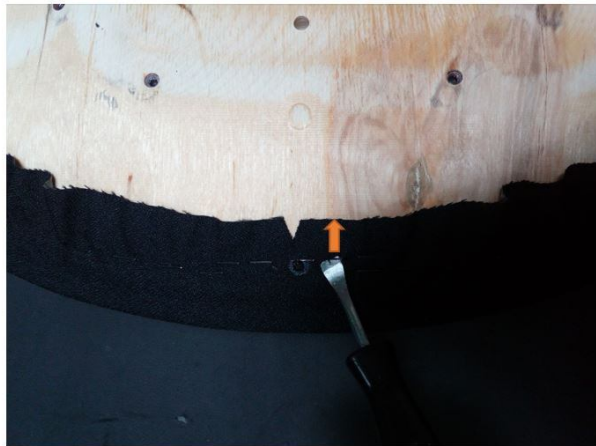

11. Separate the seat foam from the plywood.



TAKING APART PROFIM LIGHT UP 250SL

Light Up 250SL parts can be sorted into 6 categories

Wood



Complexe



Padding



Steel



Plastic



Textile

